



72—191 Removal and installation of rear door crank operated window

Removal

- 1 Remove window lift (72—181).
- 2 Remove both rear window running rail bolts and detach window running in door.
- 3 Remove inner sealing rail (72—160).
- 4 Remove outer sealing rail (72—170).

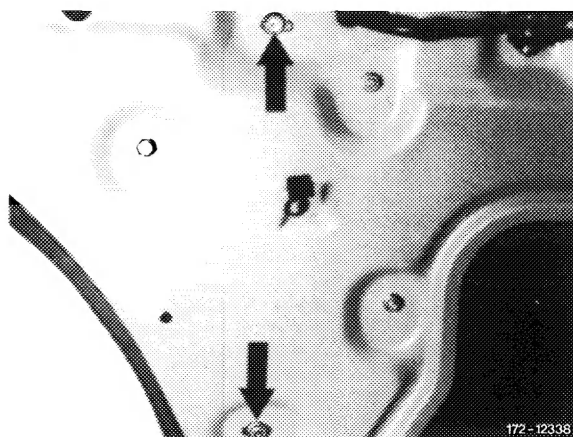

- 5 Lift front of crank operated window and tilt toward rear.
- 6 Pull out crank operated window upward.

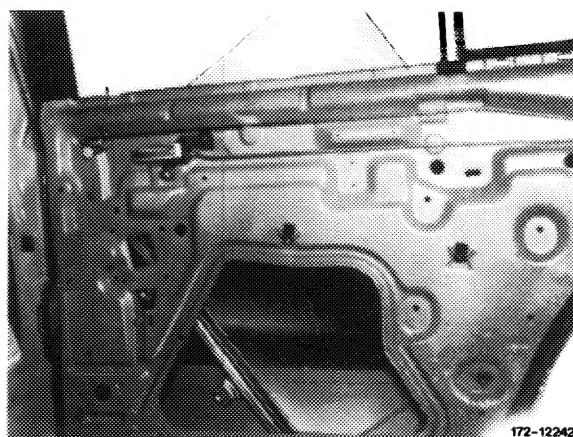

Installation

- 7 Install in reverse sequence.